

	64954-00			
64956AT-00		MAIN		
	454-344			PIPER FUEL CELLS
	461-748			
	64954-00			
82-47090-0		LH OIL		
				B-25 FUEL CELLS
82-47090-1		RH OIL		
				B-25 FUEL CELLS
82-48226		LH FWD MAIN		
				B-25 FUEL CELLS
82-48226-1		RH FWD MAIN (B25)		
				B-25 FUEL CELLS
82-482261-1		DELETE		
				B-25 FUEL CELLS
82-48227		LH FWD AUX		
				B-25 FUEL CELLS
82-48227-1		RH FWD AUX		
				B-25 FUEL CELLS
82-48228		LH AFT AUX		
				B-25 FUEL CELLS
82-48228-1		RH AFT AUX		
				B-25 FUEL CELLS
82-48229-0		LH OUTBOARD AUX		
				B-25 FUEL CELLS
82-48229-1		RH OUTBOARD AUX		
				B-25 FUEL CELLS
82-48230		LH AFT MAIN		
				B-25 FUEL CELLS
82-48230-1		RH AFT MAIN		
				B-25 FUEL CELLS
920008AT-7		LH MAIN 25 GALLON		
	2220-1			BEECHCRAFT FUEL CELLS
			D5726-UP 36	35 36
	50-920008-7			
			D5726-UP 36	35 36
	920008-5			
			-----	-----

		D5726-UP 36			35 36
920008-7		D5726-UP 36			35 36
920008-9		D5726-UP 36			35 36
95-380027-1		D5726-UP 36			35 36
920008AT-8	RH MAIN 25 GALLON				
2220-1				BEECHCRAFT FUEL CELLS	
		D5726-UP 36			35-33
					35-A33
50-920008-8		D5726-UP 36			35-33
					35-A33
920008-8		D5726-UP 36			35-33
					35-A33
<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibility</u>	<u>Make</u>	<u>Model</u>
	95-380027-2			BEECHCRAFT FUEL CELLS	
			D5726-UP 36		35-33
					35-A33
920010AT-6	LH CENTER SECTION				
	2510-6			BEECHCRAFT FUEL CELLS	
	50-920010-6				
920010AT-7	RH CENTER SECTION				
	50-920010-3			BEECHCRAFT FUEL CELLS	
	50-920010-7				
	50-920010AT-7				
	920010-3				
	920010-7				

	920010AT-7		
920011AT-13		LH AUX 31 GALLON	
	920011-13		BEECHCRAFT FUEL CELLS
	920011-9		
	95-920011-9		
920011AT-14		RH AUX 31 GALLON	
	920011-14		BEECHCRAFT FUEL CELLS
	920011-14		
920011AT-2		FUEL CELL	
			BEECHCRAFT FUEL CELLS
920013AT-3		LH LE OUTBOARD	
	002-920013-1		BEECHCRAFT FUEL CELLS
	002-920013-3		
	002-920013AT-1		
	002-920013AT-3		
	2013-3		
	920013AT-1		
	920013AT-3		
920013AT-4		RH LE OUTBOARD	
	002-920013-2		BEECHCRAFT FUEL CELLS
	002-920013-4		
	2013-4		
	920013-2		
920018AT-3		LH T34	
	104-920018-1		BEECHCRAFT FUEL CELLS
	104-920018-3		
920018AT-4		RH T34	
	104-920018-2		BEECHCRAFT FUEL CELLS
	104-920018-4		
920019AT-3		LH T-34	
	104-920019-1		BEECHCRAFT FUEL CELLS
	104-920019-3		
920019AT-4		RH T34	
	104-920019-2		BEECHCRAFT FUEL CELLS
	104-920019-4		
920033AT-3		LH MAIN 40 GALLON	

921218AT-6	RH MAIN 20 GAL BAYONET	
35-921218-10		BEECHCRAFT FUEL CELLS
	D3539-5725	35 36
35-921218-6		
	D3539-5725	35 36
921218-10		
	D3539-5725	35 36
921218-6		
	D3539-5725	35 36
921507AT-15	LH MAIN 25 GAL	BEECHCRAFT FUEL CELLS
921507AT-16	RH MAIN 25 GAL	BEECHCRAFT FUEL CELLS
921507AT-3	LH MAIN 25 GALLON	BEECHCRAFT FUEL CELLS
50-9210507-7		BEECHCRAFT FUEL CELLS
50-921507-1		
50-921507-11		
50-921507-3		
50-921507-9		
50-921507AT-5		
921507-3		
921507AT-4	RH MAIN 25 GALLON	BEECHCRAFT FUEL CELLS
921507-4		
921510AT-13	LH AFT/AUX INBOARD	BEECHCRAFT FUEL CELLS
2510-9		
50-921510-1		
50-921510-13		
50-921510-5		
50-921510-9		
921510-13		
921510AT-14	RH AFT/AUX INBOARD	BEECHCRAFT FUEL CELLS
2510-10		
50-921510AT-10		
50-921510AT-14		
50-921510AT-2		
50-921510AT-6		
921510AT-10		

921510-10
 921510-14
 921510-2

<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibilty</u>	<u>Make</u>	<u>Model</u>
		921510-6		BEEHCRAFT FUEL CELLS	
		921510AT-14			
		921510AT-2			
		921510AT-6			
921510AT-16		RH AFT/AUX OUTBOARD		BEEHCRAFT FUEL CELLS	
921510AT-17		LH AFT/AUX OUTBOARD		BEEHCRAFT FUEL CELLS	
921540AT-0		LH MAIN 20 GALLON W/SNAPS		BEEHCRAFT FUEL CELLS	
	35-921540			BEEHCRAFT FUEL CELLS	
921540AT-1		RH MAIN 20 GALLON W/SNAPS		BEEHCRAFT FUEL CELLS	
	35-921540-1			BEEHCRAFT FUEL CELLS	
921552AT-12		RH MAIN 40 GALLON		BEEHCRAFT FUEL CELLS	
	35-4000-2 MOD FROM			BEEHCRAFT FUEL CELLS	
			LC230-UP LD151-UP		65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
	50-921552-10		LC230-UP LD151-UP		65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
	50-921552-12		LC230-UP LD151-UP		65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
	50-921552-2		LC230-UP LD151-UP		65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
	50-921552-4		LC230-UP LD151-UP		65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
	50-921552-6		LC230-UP LD151-UP		65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,

	LC230-UP LD151-UP	65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
50-921552-8		
	LC230-UP LD151-UP	65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
921552AT-7	LH MAIN 40 GALLON	
35-4000-1 MOD FROM		BEEHCRAFT FUEL CELLS
		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
50-921552-1		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
50-921552-11		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
50-921552-3		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
50-921552-5		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
50-921552-7		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
50-921552-9		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
921554AT-11	LH OUTBOARD AFT	
50-921554-1		BEEHCRAFT FUEL CELLS
	LJ1-UP	65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
50-921554-3		65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
	LJ1-UP	65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
50-921554-7		65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
921554AT-12	RH OUTBOARD AFT	
2554-12		BEEHCRAFT FUEL CELLS
	LJ1-UP	65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
50-921554-1		65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
	LJ1-UP	65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
50-921554-12		65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
	LJ1-UP	65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
50-921554-7		65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
	LJ1-UP	65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
95-920011-6	Beech Fuel Cell	

<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibility</u>	<u>Make</u>	<u>Model</u>
				BEECHCRAFT FUEL CELLS	
97990AT-02		LH			
	97990-02			PIPER FUEL CELLS	
			PA 36 BRAVE ALL		PA36-285
97990AT-03		RH			
	97990-03			PIPER FUEL CELLS	
980050AT-501		MAIN			
	980050-501			AEROSTAR FUEL CELLS	
	FCE-53583				
9900072-1		1 FUSELAGE SELFSEALING/BLADDER			
	4016176-3			T-37 AND A-37	
	FCD47944				
9900072-10		5 RH OUTBD INTER SELFSEALING/B			
	4026097-2			T-37 AND A-37	
	FCD48560				
9900072-11		6 LH 4 SELFSEALING/BLADDER A-3			
	4026098-1			T-37 AND A-37	
	FCD48555				
9900072-12		6 RH 4 SELFSEALING/BLADDER A-3			
	4026098-2			T-37 AND A-37	
	FCD48556				
9900072-13		7 LH OUTBD SELFSEALING/BLADDE			
	4026099-1			T-37 AND A-37	
	FCD48561				
9900072-14		7 RH OUTBD SELFSEALING/BLADDE			
	4026099-2			T-37 AND A-37	
	FCD48562				
9900072-3		2 LH OUTBD L.E. SELFSEALING/BL			
	4026104-1			T-37 AND A-37	
	FCD48553				
9900072-4		2 RH OUTBD L.E. SELFSEALING/BL			

990072-1	4026104-2 FCD48554	3 LH INBD L.E. SELFSEALING/BLA		T-37 AND A-37	
9900072-5	4026105-1 FCD48551	3 RH INBD L.E. SELFSEALING/BLA		T-37 AND A-37	
9900072-6	4026105-2 FCD48552	4 LH INBD INTER SELFSEALING/BL		T-37 AND A-37	
9900072-7	4026096-1 FCD48557	4 RH INBD INTER SELFSEALING/BL		T-37 AND A-37	
9900072-8	4026096-2 FCD48558	5 LH OUTBD INTER SELFSEALING/B		T-37 AND A-37	
9900072-9	4026097-1 FCD48559	LH LOCKER		CESSNA FUEL CELLS	
9910023AT-3	99100023-3 9910023-3 9923-3	RH LOCKER		CESSNA FUEL CELLS	
9910023AT-4	9910023-4	LH LOCKER		CESSNA FUEL CELLS	
9910027AT-1	9910027-1 9927-1	RH LOCKER		CESSNA FUEL CELLS	
9910027AT-2					

<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibilty</u>	<u>Make</u>	<u>Model</u>
-------------------	--------------	------------------------	------------------	-------------	--------------

	9910027-2		CESSNA FUEL CELLS
	9927-2		
9910241-1		(337) LH LOCKER (NON-CERTIFICA	
	9910241-1		CESSNA FUEL CELLS
	9910241-3		
9910241-4		(337) RH LOCKER (NON-CERTIFICA	
			CESSNA FUEL CELLS
9910304-1		(337) LH LOCKER	
			CESSNA FUEL CELLS
9910304-2		(337) RH LOCKER	
			CESSNA FUEL CELLS
9910304-3		(337) LH	
			CESSNA FUEL CELLS
AT204-501		LOWER CENTER	
	2F1-6-31258-505		AERO COMMANDER FUEL CELLS
	5630204-501		
	5630204-503		
AT296-1		LH AFT INBOARD AUX	
	296-1		AERO COMMANDER FUEL CELLS
		ALL	AERO COMMANDER
	2F1-6-37573-5		
		ALL	AERO COMMANDER
	630296-1		
		ALL	AERO COMMANDER
	630296-503		
		ALL	AERO COMMANDER
AT296-2		RH AFT INBOARD AUX	
	296-2		AERO COMMANDER FUEL CELLS
		ALL	AERO COMMANDER
	2F1-6-37573-6		
		ALL	AERO COMMANDER
	630296-2		
		ALL	AERO COMMANDER
	630296-504		
		ALL	AERO COMMANDER
AT307-1		LH SMALL INBOARD AFT	
	2F1-6-37540-5		AERO COMMANDER FUEL CELLS

	5630307-1				
	5630307-501				
AT307-2		RH SMALL INBOARD AFT			
	2F1-6-37540-6			AERO COMMANDER FUEL CELLS	
	307-2				
	5630307-2				
	5630307-502				
AT308-1		LH SMALL INBD FORWARD			
	2F1-6-37539-5			AERO COMMANDER FUEL CELLS	
	308-1				
	630308-1				
	630308-501				
AT308-2		RH SMALL INBD FORWARD			
	2F1-6-37539-6			AERO COMMANDER FUEL CELLS	
	308-2				
	5630308-2				
	5630308-502				
AT60-501		LH INBOARD FORWARD			
	2F1-6-37539-5			AERO COMMANDER FUEL CELLS	
		ALL		500 500A 500B 500U 560A 560E 560F 680 680E 680F	
	60-501				
<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibility</u>	<u>Make</u>	<u>Model</u>
			ALL		500 500A 500B 500U 560A 560E 560F 680 680E 680F
	630060-501		ALL		500 500A 500B 500U 560A 560E 560F 680 680E 680F
	630060-511		ALL		500 500A 500B 500U 560A 560E 560F 680 680E 680F
AT60-502		RH INBOARD FORWARD			
	2F1-6-37539-506			AERO COMMANDER FUEL CELLS	

	2F1-6-31258-500		AERO COMMANDER FUEL CELLS
		ALL	500 500A 500B 500U 560A 560E 560F 680 680E 680F(
	5630060-502		
		ALL	500 500A 500B 500U 560A 560E 560F 680 680E 680F(
	60-502		
		ALL	500 500A 500B 500U 560A 560E 560F 680 680E 680F(
	630060-502		
		ALL	500 500A 500B 500U 560A 560E 560F 680 680E 680F(
	630060-512		
		ALL	500 500A 500B 500U 560A 560E 560F 680 680E 680F(
AT60-507			
		LH LARGE INBD FORWARD	
	2F1-6-31258-513		AERO COMMANDER FUEL CELLS
		ALL	685 690 690A 690B 500,500A,500B, 500U, 560A, 560E, 560F, 680,680E,680F,680(P)
	630060-507		
		ALL	685 690 690A 690B 500,500A,500B, 500U, 560A, 560E, 560F, 680,680E,680F,680(P)
	630060-509		
		ALL	685 690 690A 690B 500,500A,500B, 500U, 560A, 560E, 560F, 680,680E,680F,680(P)
AT60-508			
		RH LARGE INBD FORWARD	
	2F1-6-31258-514		AERO COMMANDER FUEL CELLS
	630060-508		
	630060-510		
AT61-501			
		LH INBOARD AFT	
	2F1-6-30437-505		AERO COMMANDER FUEL CELLS
	61-501		
	630061-501		
	630061-511		
AT61-502			
		RH INBOARD AFT	
	2F1-6-30437-506		AERO COMMANDER FUEL CELLS
	5630061-502		

	630061-502				
	630061-512				
AT61-507		LH LARGE INBOARD AFT			
	2-F1-6-30437-513			AERO COMMANDER FUEL CELLS	
	630061-507				
	630061-509				
AT61-508		RH LARGE INBOARD AFT			
	2F1-6-30437-514			AERO COMMANDER FUEL CELLS	
	5630061-508/-510				
	630061-508				
	630061-510				
AT62-507		UPPER CENTER			
	2F1-6-31405-513			AERO COMMANDER FUEL CELLS	
		ALL		500 500A 500B 500S 500U 560A 560E 560F 680 680E 680F 680FL 680FL(P) 680T 680V 680W 681 685 690	
<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibility</u>	<u>Make</u>	<u>Model</u>
	630062-507		ALL	AERO COMMANDER FUEL CELLS	500 500A 500B 500S 500U 560A 560E 560F 680 680E 680F 680FL 680FL(P) 680T 680V 680W 681 685 690
	630062-511		ALL		500 500A 500B 500S 500U 560A 560E 560F 680 680E 680F 680FL 680FL(P) 680T 680V 680W 681 685 690
AT62-511		CENTER			
				AERO COMMANDER FUEL CELLS	
AT63-501		LH OUTBOARD FORWARD			
	2F1-6-31406-505			AERO COMMANDER FUEL CELLS	
	63-501				
	630062-501				
	630062-511				

AT63-502	RH OUTBOARD FORWARD	
	2F1-6-31406-506	AERO COMMANDER FUEL CELLS
	63-502	
	630063-502	
	630063-512	
AT63-507	LH OUTBOARD FORWARD	
	2F1-6-31406-513	AERO COMMANDER FUEL CELLS
	630063-507	
	630063-509	
AT63-508	RH OUTBOARD FORWARD	
	2F1-6-31406-514	AERO COMMANDER FUEL CELLS
	63-508	
	630063-508	
	630063-510	
AT64-501	LH OUTBOARD AFT	
	2F1-6-30364-515	AERO COMMANDER FUEL CELLS
	630064-501	
	630064-515	
AT64-502	RH OUTBOARD AFT	
	2F1-6-30364-516	AERO COMMANDER FUEL CELLS
	630064-502	
	630064-516	
	64-502	
AT64-507	LH OUTBOARD AFT	
	2F1-6-30364-517	AERO COMMANDER FUEL CELLS
	630064-507	
	630064-511	
	64-507	
AT64-508	RH OUTBOARD AFT	
	2F1-6-30364-518	AERO COMMANDER FUEL CELLS
	630064-508	
	630064-512	
	64-508	
AT64-509	LH OUTBOARD AFT	
	2F1-30364-513	AERO COMMANDER FUEL CELLS
	630064-509	
	630064-513	

AT64-510	630064-513	RH OUTBOARD AFT			AERO COMMANDER FUEL CELLS
AT66-1	5630066-1	LH OIL			AERO COMMANDER FUEL CELLS
	630066-1		ALL		500 500A 500B 500U 520 560 680 680E 680F 680FL
AT66-2		RH OIL			
			ALL		500 500A 500B 500U 520 560 680 680E 680F 680FL
<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibility</u>	<u>Make</u>	<u>Model</u>
	5630066-2		ALL		AERO COMMANDER FUEL CELLS
	630066-2		ALL		500 500A 500B 500U 520 560 680 680E 680F
B-510-10		RH ADD ON CELL			
B-510-9		LH ADD ON CELL			MOONEY FUEL CELLS
B501-AL		FUEL CELL			MOONEY FUEL CELLS
B501-BL					MOONEY FUEL CELLS
B501-CL					MOONEY FUEL CELLS
B501-CL-1		LH OUTBOARD			MOONEY FUEL CELLS
CB-600		CB-600 FUEL CELL			SEABEE FUEL CELLS
F4U-1		CORSAIR INTERNAL CABLES			

		P-51 FUEL CELLS
F4U-4	CORSAIR EXTERNAL TABS	
		P-51 FUEL CELLS
F4U-5	CORSAIR EXTERNAL TABS	
		P-51 FUEL CELLS
F4U-7	CORSAIR EXTERNAL TABS	
		P-51 FUEL CELLS
FCD47944	#1 RH SELF-SEALING FUEL CELL	
	9900072-1	CESSNA FUEL CELLS
FCD48551	#2 LH SELF-SEALING FUEL CELL	
	9900072-3	CESSNA FUEL CELLS
FDCD 60965	FUEL CELL	
	60965AT-1	DEHAVILLAND FUEL CELLS
L-39 LOWER AUX	LOWER AUX	
		ALBATROSS FUEL CELLS
L-39 UPPER AUX	L-39 UPPER AUX	
		ALBATROSS FUEL CELLS
MALIBU SET	PIPER MALIBU SET OF FOUR	
		PIPER FUEL CELLS
MDL15AT-LH	LH AERONCA	
	2F1-6-11445LH	AERONCA FUEL CELLS
MDL15AT-RH	RH AERONCA	
	2F1-6-11445	AERONCA FUEL CELLS
MOONEY	SET OF MOONEYS	
		MOONEY FUEL CELLS
P-39	FUEL CELL	
		P-39 FUEL CELLS
P-51	FUEL CELL	
		P-51 FUEL CELLS
P-51 CUSTOM AUX	CUSTOM CELL	
		P-51 FUEL CELLS
P-51 MAIN	P-51 MAIN	
		P-51 FUEL CELLS
SI00601	SIERRA MAIN SET (SIERRA INDUST	
		CESSNA FUEL CELLS
SI00601-12	SIERRA MAIN (SIERRA INDUSTRIE	
		CESSNA FUEL CELLS
SI00601-13	SIERRA MAIN (SIERRA INDUSTRIE	

SI00601-13

SIERRA MAIN (SIERRA INDUSTRIE

CESSNA FUEL CELLS

SI10650

SIERRA AUX SET (SIERRA INDUSTR

<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibility</u>	<u>Make</u>	<u>Model</u>
SI10650-AL		SIERRA AUX (SIERRA INDUSTRIES		CESSNA FUEL CELLS	CESSNA FUEL CELLS
SI10650-AR		SIERRA AUX (SIERRA INDUSTRIES		CESSNA FUEL CELLS	CESSNA FUEL CELLS
SI10650-BL		SIERRA AUX (SIERRA INDUSTRIES		CESSNA FUEL CELLS	CESSNA FUEL CELLS
SI10650-BR		SIERRA AUX (SIERRA INDUSTRIES,		CESSNA FUEL CELLS	CESSNA FUEL CELLS
SI10650-CL		SIERRA AUX (SIERRA INDUSTRIES,		CESSNA FUEL CELLS	CESSNA FUEL CELLS
SI10650-CR		SIERRA AUX (SIERRA INDUSTRIES		CESSNA FUEL CELLS	CESSNA FUEL CELLS