















































































	64954-00			
<b>64956AT-00</b>		<b>MAIN</b>		
	454-344			PIPER FUEL CELLS
	461-748			
	64954-00			
<b>82-47090-0</b>		<b>LH OIL</b>		
				B-25 FUEL CELLS
<b>82-47090-1</b>		<b>RH OIL</b>		
				B-25 FUEL CELLS
<b>82-48226</b>		<b>LH FWD MAIN</b>		
				B-25 FUEL CELLS
<b>82-48226-1</b>		<b>RH FWD MAIN (B25)</b>		
				B-25 FUEL CELLS
<b>82-482261-1</b>		<b>DELETE</b>		
				B-25 FUEL CELLS
<b>82-48227</b>		<b>LH FWD AUX</b>		
				B-25 FUEL CELLS
<b>82-48227-1</b>		<b>RH FWD AUX</b>		
				B-25 FUEL CELLS
<b>82-48228</b>		<b>LH AFT AUX</b>		
				B-25 FUEL CELLS
<b>82-48228-1</b>		<b>RH AFT AUX</b>		
				B-25 FUEL CELLS
<b>82-48229-0</b>		<b>LH OUTBOARD AUX</b>		
				B-25 FUEL CELLS
<b>82-48229-1</b>		<b>RH OUTBOARD AUX</b>		
				B-25 FUEL CELLS
<b>82-48230</b>		<b>LH AFT MAIN</b>		
				B-25 FUEL CELLS
<b>82-48230-1</b>		<b>RH AFT MAIN</b>		
				B-25 FUEL CELLS
<b>920008AT-7</b>		<b>LH MAIN 25 GALLON</b>		
	2220-1			BEECHCRAFT FUEL CELLS
			D5726-UP 36	35 36
	50-920008-7			
			D5726-UP 36	35 36
	920008-5			
			-----	-----

		D5726-UP 36			35 36
920008-7		D5726-UP 36			35 36
920008-9		D5726-UP 36			35 36
95-380027-1		D5726-UP 36			35 36
<b>920008AT-8</b>	<b>RH MAIN 25 GALLON</b>				
2220-1				BEECHCRAFT FUEL CELLS	
		D5726-UP 36			35-33
					35-A33
50-920008-8		D5726-UP 36			35-33
					35-A33
920008-8		D5726-UP 36			35-33
					35-A33

<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibility</u>	<u>Make</u>	<u>Model</u>
	95-380027-2			BEECHCRAFT FUEL CELLS	
			D5726-UP 36		35-33
					35-A33
<b>920010AT-6</b>		<b>LH CENTER SECTION</b>			
	2510-6			BEECHCRAFT FUEL CELLS	
	50-920010-6				
<b>920010AT-7</b>		<b>RH CENTER SECTION</b>			
	50-920010-3			BEECHCRAFT FUEL CELLS	
	50-920010-7				
	50-920010AT-7				
	920010-3				
	920010-7				


	920010AT-7		
<b>920011AT-13</b>		<b>LH AUX 31 GALLON</b>	
	920011-13		BEECHCRAFT FUEL CELLS
	920011-9		
	95-920011-9		
<b>920011AT-14</b>		<b>RH AUX 31 GALLON</b>	
	920011-14		BEECHCRAFT FUEL CELLS
	920011-14		
<b>920011AT-2</b>		<b>FUEL CELL</b>	
			BEECHCRAFT FUEL CELLS
<b>920013AT-3</b>		<b>LH LE OUTBOARD</b>	
	002-920013-1		BEECHCRAFT FUEL CELLS
	002-920013-3		
	002-920013AT-1		
	002-920013AT-3		
	2013-3		
	920013AT-1		
	920013AT-3		
<b>920013AT-4</b>		<b>RH LE OUTBOARD</b>	
	002-920013-2		BEECHCRAFT FUEL CELLS
	002-920013-4		
	2013-4		
	920013-2		
<b>920018AT-3</b>		<b>LH T34</b>	
	104-920018-1		BEECHCRAFT FUEL CELLS
	104-920018-3		
<b>920018AT-4</b>		<b>RH T34</b>	
	104-920018-2		BEECHCRAFT FUEL CELLS
	104-920018-4		
<b>920019AT-3</b>		<b>LH T-34</b>	
	104-920019-1		BEECHCRAFT FUEL CELLS
	104-920019-3		
<b>920019AT-4</b>		<b>RH T34</b>	
	104-920019-2		BEECHCRAFT FUEL CELLS
	104-920019-4		
<b>920033AT-3</b>		<b>LH MAIN 40 GALLON</b>	

920033-1			172 GAL SYS	BEEHCRAFT FUEL CELLS	BEECH BARON 55A 55B 55C 55D 55E 58 BARON CONFIRM GAL CAP. OF FUEL SYS FOR ACC. PN
<b>920033AT-4</b>		<b>RH MAIN 40 GALLON</b>			
920033-2			172 GAL SYS	BEEHCRAFT FUEL CELLS	55A 55B 55C 55D 55E 58 BARON CONFIRM GAL CAP OF FUEL SYS
<b>921046AT-3</b>		<b>LH LE OUTBOARD</b>			
2646-3				BEEHCRAFT FUEL CELLS	
60-921046-1					
<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibility</u>	<u>Make</u>	<u>Model</u>
60-921046-3				BEEHCRAFT FUEL CELLS	
<b>921046AT-4</b>		<b>RH LE OUTBOARD</b>			
2651-4				BEEHCRAFT FUEL CELLS	
60-921046-2					
60-921046-4					
<b>921057AT-3</b>		<b>LH MAIN 40 GALLON</b>			
2657-3				BEEHCRAFT FUEL CELLS	
60-921057-1					
60-921057-3					
<b>921057AT-4</b>		<b>RH MAIN 40 GALLON</b>			
2657-4				BEEHCRAFT FUEL CELLS	
60-921057-2					
60-921057-4					
<b>921218AT-5</b>		<b>LH MAIN 20 GAL BAYONET</b>			
35-921218-1				BEEHCRAFT FUEL CELLS	
35-921218-5					
921218-1					
921218-5					

<b>921218AT-6</b>	<b>RH MAIN 20 GAL BAYONET</b>	
35-921218-10		BEECHCRAFT FUEL CELLS
	D3539-5725	35 36
35-921218-6		
	D3539-5725	35 36
921218-10		
	D3539-5725	35 36
921218-6		
	D3539-5725	35 36
<b>921507AT-15</b>	<b>LH MAIN 25 GAL</b>	BEECHCRAFT FUEL CELLS
<b>921507AT-16</b>	<b>RH MAIN 25 GAL</b>	BEECHCRAFT FUEL CELLS
<b>921507AT-3</b>	<b>LH MAIN 25 GALLON</b>	BEECHCRAFT FUEL CELLS
50-9210507-7		BEECHCRAFT FUEL CELLS
50-921507-1		
50-921507-11		
50-921507-3		
50-921507-9		
50-921507AT-5		
921507-3		
<b>921507AT-4</b>	<b>RH MAIN 25 GALLON</b>	BEECHCRAFT FUEL CELLS
921507-4		
<b>921510AT-13</b>	<b>LH AFT/AUX INBOARD</b>	BEECHCRAFT FUEL CELLS
2510-9		
50-921510-1		
50-921510-13		
50-921510-5		
50-921510-9		
921510-13		
<b>921510AT-14</b>	<b>RH AFT/AUX INBOARD</b>	BEECHCRAFT FUEL CELLS
2510-10		
50-921510AT-10		
50-921510AT-14		
50-921510AT-2		
50-921510AT-6		
921510AT-10		



921510-10  
 921510-14  
 921510-2

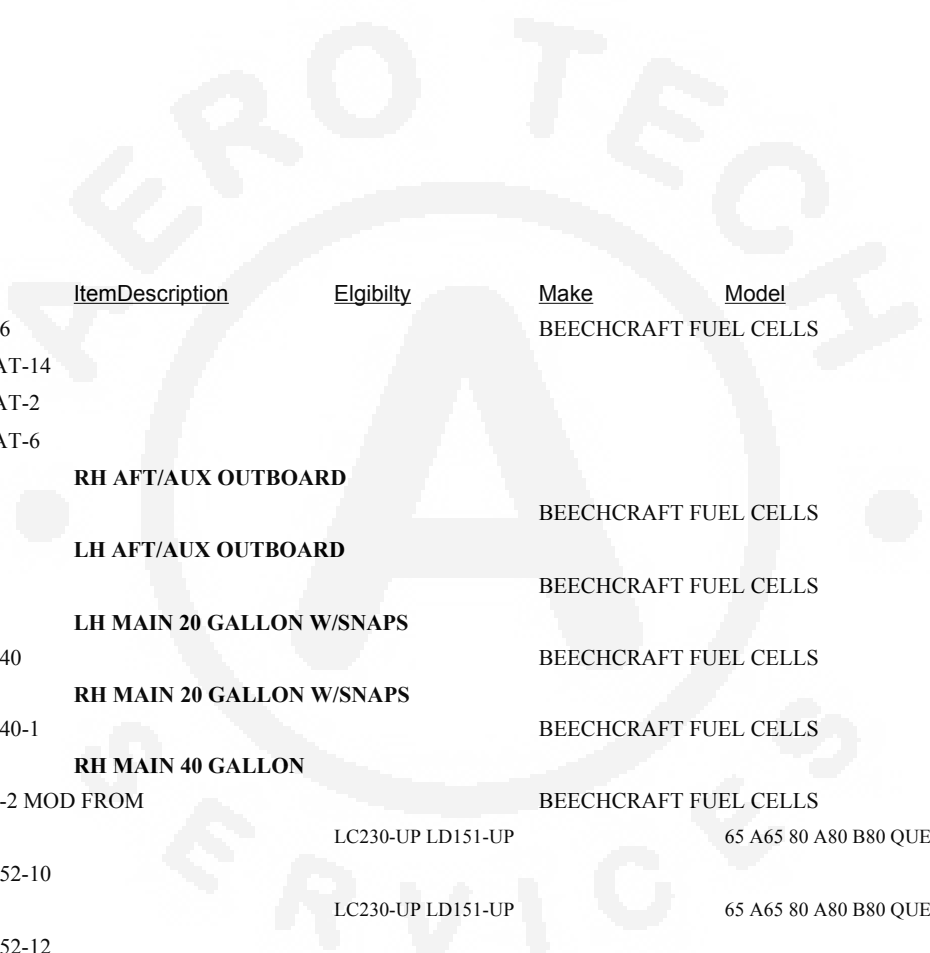

<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibility</u>	<u>Make</u>	<u>Model</u>
		921510-6		BEEHCRAFT FUEL CELLS	
		921510AT-14			
		921510AT-2			
		921510AT-6			
<b>921510AT-16</b>		<b>RH AFT/AUX OUTBOARD</b>		BEEHCRAFT FUEL CELLS	
<b>921510AT-17</b>		<b>LH AFT/AUX OUTBOARD</b>		BEEHCRAFT FUEL CELLS	
<b>921540AT-0</b>		<b>LH MAIN 20 GALLON W/SNAPS</b>		BEEHCRAFT FUEL CELLS	
	35-921540			BEEHCRAFT FUEL CELLS	
<b>921540AT-1</b>		<b>RH MAIN 20 GALLON W/SNAPS</b>		BEEHCRAFT FUEL CELLS	
	35-921540-1			BEEHCRAFT FUEL CELLS	
<b>921552AT-12</b>		<b>RH MAIN 40 GALLON</b>		BEEHCRAFT FUEL CELLS	
	35-4000-2 MOD FROM			BEEHCRAFT FUEL CELLS	
			LC230-UP LD151-UP		65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
	50-921552-10				
			LC230-UP LD151-UP		65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
	50-921552-12				
			LC230-UP LD151-UP		65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
	50-921552-2				
			LC230-UP LD151-UP		65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
	50-921552-4				
			LC230-UP LD151-UP		65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
	50-921552-6				
			LC230-UP LD151-UP		65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,

	LC230-UP LD151-UP	65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
50-921552-8		
	LC230-UP LD151-UP	65 A65 80 A80 B80 QUEENAIR 99 90, A90, B90, C90,
<b>921552AT-7</b>	<b>LH MAIN 40 GALLON</b>	
35-4000-1 MOD FROM		<b>BEECHCRAFT FUEL CELLS</b>
		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
50-921552-1		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
50-921552-11		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
50-921552-3		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
50-921552-5		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
50-921552-7		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
50-921552-9		90 A90 B90 C90 C90A E90 F90 99 100 A100 B100
<b>921554AT-11</b>	<b>LH OUTBOARD AFT</b>	
50-921554-1		<b>BEECHCRAFT FUEL CELLS</b>
	LJ1-UP	65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
50-921554-3		65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
	LJ1-UP	65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
50-921554-7		65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
<b>921554AT-12</b>	<b>RH OUTBOARD AFT</b>	
2554-12		<b>BEECHCRAFT FUEL CELLS</b>
	LJ1-UP	65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
50-921554-1		65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
	LJ1-UP	65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
50-921554-12		65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
	LJ1-UP	65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
50-921554-7		65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
	LJ1-UP	65 A65 A65-8200 65-80 A65-80 65A A80-8800 65-B80
<b>95-920011-6</b>	<b>Beech Fuel Cell</b>	

<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibility</u>	<u>Make</u>	<u>Model</u>
				BEECHCRAFT FUEL CELLS	
<b>97990AT-02</b>		<b>LH</b>			
	97990-02			PIPER FUEL CELLS	
			PA 36 BRAVE ALL		PA36-285
<b>97990AT-03</b>		<b>RH</b>			
	97990-03			PIPER FUEL CELLS	
<b>980050AT-501</b>		<b>MAIN</b>			
	980050-501			AEROSTAR FUEL CELLS	
	FCE-53583				
<b>9900072-1</b>		<b>1 FUSELAGE SELFSEALING/BLADDER</b>			
	4016176-3			T-37 AND A-37	
	FCD47944				
<b>9900072-10</b>		<b>5 RH OUTBD INTER SELFSEALING/B</b>			
	4026097-2			T-37 AND A-37	
	FCD48560				
<b>9900072-11</b>		<b>6 LH 4 SELFSEALING/BLADDER A-3</b>			
	4026098-1			T-37 AND A-37	
	FCD48555				
<b>9900072-12</b>		<b>6 RH 4 SELFSEALING/BLADDER A-3</b>			
	4026098-2			T-37 AND A-37	
	FCD48556				
<b>9900072-13</b>		<b>7 LH OUTBD SELFSEALING/BLADDE</b>			
	4026099-1			T-37 AND A-37	
	FCD48561				
<b>9900072-14</b>		<b>7 RH OUTBD SELFSEALING/BLADDE</b>			
	4026099-2			T-37 AND A-37	
	FCD48562				
<b>9900072-3</b>		<b>2 LH OUTBD L.E. SELFSEALING/BL</b>			
	4026104-1			T-37 AND A-37	
	FCD48553				
<b>9900072-4</b>		<b>2 RH OUTBD L.E. SELFSEALING/BL</b>			

990072-1	4026104-2 FCD48554	3 LH INBD L.E. SELFSEALING/BLA		T-37 AND A-37	
9900072-5	4026105-1 FCD48551	3 RH INBD L.E. SELFSEALING/BLA		T-37 AND A-37	
9900072-6	4026105-2 FCD48552	4 LH INBD INTER SELFSEALING/BL		T-37 AND A-37	
9900072-7	4026096-1 FCD48557	4 RH INBD INTER SELFSEALING/BL		T-37 AND A-37	
9900072-8	4026096-2 FCD48558	5 LH OUTBD INTER SELFSEALING/B		T-37 AND A-37	
9900072-9	4026097-1 FCD48559	LH LOCKER		CESSNA FUEL CELLS	
9910023AT-3	99100023-3 9910023-3 9923-3	RH LOCKER		CESSNA FUEL CELLS	
9910023AT-4	9910023-4	LH LOCKER		CESSNA FUEL CELLS	
9910027AT-1	9910027-1 9927-1	RH LOCKER		CESSNA FUEL CELLS	
9910027AT-2					

<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibilty</u>	<u>Make</u>	<u>Model</u>
-------------------	--------------	------------------------	------------------	-------------	--------------

	9910027-2		CESSNA FUEL CELLS
	9927-2		
<b>9910241-1</b>		<b>(337) LH LOCKER (NON-CERTIFICA</b>	
	9910241-1		CESSNA FUEL CELLS
	9910241-3		
<b>9910241-4</b>		<b>(337) RH LOCKER (NON-CERTIFICA</b>	
			CESSNA FUEL CELLS
<b>9910304-1</b>		<b>(337) LH LOCKER</b>	
			CESSNA FUEL CELLS
<b>9910304-2</b>		<b>(337) RH LOCKER</b>	
			CESSNA FUEL CELLS
<b>9910304-3</b>		<b>(337) LH</b>	
			CESSNA FUEL CELLS
<b>AT204-501</b>		<b>LOWER CENTER</b>	
	2F1-6-31258-505		AERO COMMANDER FUEL CELLS
	5630204-501		
	5630204-503		
<b>AT296-1</b>		<b>LH AFT INBOARD AUX</b>	
	296-1		AERO COMMANDER FUEL CELLS
		ALL	AERO COMMANDER
	2F1-6-37573-5		
		ALL	AERO COMMANDER
	630296-1		
		ALL	AERO COMMANDER
	630296-503		
		ALL	AERO COMMANDER
<b>AT296-2</b>		<b>RH AFT INBOARD AUX</b>	
	296-2		AERO COMMANDER FUEL CELLS
		ALL	AERO COMMANDER
	2F1-6-37573-6		
		ALL	AERO COMMANDER
	630296-2		
		ALL	AERO COMMANDER
	630296-504		
		ALL	AERO COMMANDER
<b>AT307-1</b>		<b>LH SMALL INBOARD AFT</b>	
	2F1-6-37540-5		AERO COMMANDER FUEL CELLS

	5630307-1				
	5630307-501				
<b>AT307-2</b>		<b>RH SMALL INBOARD AFT</b>			
	2F1-6-37540-6			AERO COMMANDER FUEL CELLS	
	307-2				
	5630307-2				
	5630307-502				
<b>AT308-1</b>		<b>LH SMALL INBD FORWARD</b>			
	2F1-6-37539-5			AERO COMMANDER FUEL CELLS	
	308-1				
	630308-1				
	630308-501				
<b>AT308-2</b>		<b>RH SMALL INBD FORWARD</b>			
	2F1-6-37539-6			AERO COMMANDER FUEL CELLS	
	308-2				
	5630308-2				
	5630308-502				
<b>AT60-501</b>		<b>LH INBOARD FORWARD</b>			
	2F1-6-37539-5			AERO COMMANDER FUEL CELLS	
		ALL		500 500A 500B 500U 560A 560E 560F 680 680E 680F	
	60-501				
<b>ItemNumber</b>	<b>Alias</b>	<b>ItemDescription</b>	<b>Elgibility</b>	<b>Make</b>	<b>Model</b>
			ALL		500 500A 500B 500U 560A 560E 560F 680 680E 680F
	630060-501		ALL		500 500A 500B 500U 560A 560E 560F 680 680E 680F
	630060-511		ALL		500 500A 500B 500U 560A 560E 560F 680 680E 680F
<b>AT60-502</b>		<b>RH INBOARD FORWARD</b>			
	2F1-6-37539-506			AERO COMMANDER FUEL CELLS	

	2F1-6-31258-500		AERO COMMANDER FUEL CELLS
		ALL	500 500A 500B 500U 560A 560E 560F 680 680E 680F(
	5630060-502		
		ALL	500 500A 500B 500U 560A 560E 560F 680 680E 680F(
	60-502		
		ALL	500 500A 500B 500U 560A 560E 560F 680 680E 680F(
	630060-502		
		ALL	500 500A 500B 500U 560A 560E 560F 680 680E 680F(
	630060-512		
		ALL	500 500A 500B 500U 560A 560E 560F 680 680E 680F(
<b>AT60-507</b>			
		<b>LH LARGE INBD FORWARD</b>	
	2F1-6-31258-513		AERO COMMANDER FUEL CELLS
		ALL	685 690 690A 690B 500,500A,500B, 500U, 560A, 560E, 560F, 680,680E,680F,680(P)
	630060-507		
		ALL	685 690 690A 690B 500,500A,500B, 500U, 560A, 560E, 560F, 680,680E,680F,680(P)
	630060-509		
		ALL	685 690 690A 690B 500,500A,500B, 500U, 560A, 560E, 560F, 680,680E,680F,680(P)
<b>AT60-508</b>			
		<b>RH LARGE INBD FORWARD</b>	
	2F1-6-31258-514		AERO COMMANDER FUEL CELLS
	630060-508		
	630060-510		
<b>AT61-501</b>			
		<b>LH INBOARD AFT</b>	
	2F1-6-30437-505		AERO COMMANDER FUEL CELLS
	61-501		
	630061-501		
	630061-511		
<b>AT61-502</b>			
		<b>RH INBOARD AFT</b>	
	2F1-6-30437-506		AERO COMMANDER FUEL CELLS
	5630061-502		

	630061-502				
	630061-512				
<b>AT61-507</b>		<b>LH LARGE INBOARD AFT</b>			
	2-F1-6-30437-513			AERO COMMANDER FUEL CELLS	
	630061-507				
	630061-509				
<b>AT61-508</b>		<b>RH LARGE INBOARD AFT</b>			
	2F1-6-30437-514			AERO COMMANDER FUEL CELLS	
	5630061-508/-510				
	630061-508				
	630061-510				
<b>AT62-507</b>		<b>UPPER CENTER</b>			
	2F1-6-31405-513			AERO COMMANDER FUEL CELLS	
		ALL		500 500A 500B 500S 500U 560A 560E 560F 680 680E 680F 680FL 680FL(P) 680T 680V 680W 681 685 690	
<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibility</u>	<u>Make</u>	<u>Model</u>
	630062-507		ALL	AERO COMMANDER FUEL CELLS	500 500A 500B 500S 500U 560A 560E 560F 680 680E 680F 680FL 680FL(P) 680T 680V 680W 681 685 690
	630062-511		ALL		500 500A 500B 500S 500U 560A 560E 560F 680 680E 680F 680FL 680FL(P) 680T 680V 680W 681 685 690
<b>AT62-511</b>		<b>CENTER</b>			
				AERO COMMANDER FUEL CELLS	
<b>AT63-501</b>		<b>LH OUTBOARD FORWARD</b>			
	2F1-6-31406-505			AERO COMMANDER FUEL CELLS	
	63-501				
	630062-501				
	630062-511				



<b>AT63-502</b>	<b>RH OUTBOARD FORWARD</b>	
	2F1-6-31406-506	AERO COMMANDER FUEL CELLS
	63-502	
	630063-502	
	630063-512	
<b>AT63-507</b>	<b>LH OUTBOARD FORWARD</b>	
	2F1-6-31406-513	AERO COMMANDER FUEL CELLS
	630063-507	
	630063-509	
<b>AT63-508</b>	<b>RH OUTBOARD FORWARD</b>	
	2F1-6-31406-514	AERO COMMANDER FUEL CELLS
	63-508	
	630063-508	
	630063-510	
<b>AT64-501</b>	<b>LH OUTBOARD AFT</b>	
	2F1-6-30364-515	AERO COMMANDER FUEL CELLS
	630064-501	
	630064-515	
<b>AT64-502</b>	<b>RH OUTBOARD AFT</b>	
	2F1-6-30364-516	AERO COMMANDER FUEL CELLS
	630064-502	
	630064-516	
	64-502	
<b>AT64-507</b>	<b>LH OUTBOARD AFT</b>	
	2F1-6-30364-517	AERO COMMANDER FUEL CELLS
	630064-507	
	630064-511	
	64-507	
<b>AT64-508</b>	<b>RH OUTBOARD AFT</b>	
	2F1-6-30364-518	AERO COMMANDER FUEL CELLS
	630064-508	
	630064-512	
	64-508	
<b>AT64-509</b>	<b>LH OUTBOARD AFT</b>	
	2F1-30364-513	AERO COMMANDER FUEL CELLS
	630064-509	
	630064-513	

AT64-510	630064-513	RH OUTBOARD AFT			AERO COMMANDER FUEL CELLS
AT66-1	5630066-1	LH OIL			AERO COMMANDER FUEL CELLS
	630066-1		ALL		500 500A 500B 500U 520 560 680 680E 680F 680FL
AT66-2		RH OIL			
			ALL		500 500A 500B 500U 520 560 680 680E 680F 680FL
<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Eligibility</u>	<u>Make</u>	<u>Model</u>
	5630066-2		ALL		AERO COMMANDER FUEL CELLS
	630066-2		ALL		500 500A 500B 500U 520 560 680 680E 680F
B-510-10		RH ADD ON CELL			
B-510-9		LH ADD ON CELL			MOONEY FUEL CELLS
B501-AL		FUEL CELL			MOONEY FUEL CELLS
B501-BL					MOONEY FUEL CELLS
B501-CL					MOONEY FUEL CELLS
B501-CL-1		LH OUTBOARD			MOONEY FUEL CELLS
CB-600		CB-600 FUEL CELL			SEABEE FUEL CELLS
F4U-1		CORSAIR INTERNAL CABLES			

		P-51 FUEL CELLS
<b>F4U-4</b>	<b>CORSAIR EXTERNAL TABS</b>	
		P-51 FUEL CELLS
<b>F4U-5</b>	<b>CORSAIR EXTERNAL TABS</b>	
		P-51 FUEL CELLS
<b>F4U-7</b>	<b>CORSAIR EXTERNAL TABS</b>	
		P-51 FUEL CELLS
<b>FCD47944</b>	<b>#1 RH SELF-SEALING FUEL CELL</b>	
	9900072-1	CESSNA FUEL CELLS
<b>FCD48551</b>	<b>#2 LH SELF-SEALING FUEL CELL</b>	
	9900072-3	CESSNA FUEL CELLS
<b>FDCD 60965</b>	<b>FUEL CELL</b>	
	60965AT-1	DEHAVILLAND FUEL CELLS
<b>L-39 LOWER AUX</b>	<b>LOWER AUX</b>	
		ALBATROSS FUEL CELLS
<b>L-39 UPPER AUX</b>	<b>L-39 UPPER AUX</b>	
		ALBATROSS FUEL CELLS
<b>MALIBU SET</b>	<b>PIPER MALIBU SET OF FOUR</b>	
		PIPER FUEL CELLS
<b>MDL15AT-LH</b>	<b>LH AERONCA</b>	
	2F1-6-11445LH	AERONCA FUEL CELLS
<b>MDL15AT-RH</b>	<b>RH AERONCA</b>	
	2F1-6-11445	AERONCA FUEL CELLS
<b>MOONEY</b>	<b>SET OF MOONEYS</b>	
		MOONEY FUEL CELLS
<b>P-39</b>	<b>FUEL CELL</b>	
		P-39 FUEL CELLS
<b>P-51</b>	<b>FUEL CELL</b>	
		P-51 FUEL CELLS
<b>P-51 CUSTOM AUX</b>	<b>CUSTOM CELL</b>	
		P-51 FUEL CELLS
<b>P-51 MAIN</b>	<b>P-51 MAIN</b>	
		P-51 FUEL CELLS
<b>SI00601</b>	<b>SIERRA MAIN SET (SIERRA INDUST</b>	
		CESSNA FUEL CELLS
<b>SI00601-12</b>	<b>SIERRA MAIN (SIERRA INDUSTRIE</b>	
		CESSNA FUEL CELLS
<b>SI00601-13</b>	<b>SIERRA MAIN (SIERRA INDUSTRIE</b>	

SI00601-13

SIERRA MAIN (SIERRA INDUSTRIE

CESSNA FUEL CELLS

SI10650

SIERRA AUX SET (SIERRA INDUSTR

<u>ItemNumber</u>	<u>Alias</u>	<u>ItemDescription</u>	<u>Elgibility</u>	<u>Make</u>	<u>Model</u>
SI10650-AL		SIERRA AUX (SIERRA INDUSTRIES		CESSNA FUEL CELLS	CESSNA FUEL CELLS
SI10650-AR		SIERRA AUX (SIERRA INDUSTRIES		CESSNA FUEL CELLS	CESSNA FUEL CELLS
SI10650-BL		SIERRA AUX (SIERRA INDUSTRIES		CESSNA FUEL CELLS	CESSNA FUEL CELLS
SI10650-BR		SIERRA AUX (SIERRA INDUSTRIES,		CESSNA FUEL CELLS	CESSNA FUEL CELLS
SI10650-CL		SIERRA AUX (SIERRA INDUSTRIES,		CESSNA FUEL CELLS	CESSNA FUEL CELLS
SI10650-CR		SIERRA AUX (SIERRA INDUSTRIES		CESSNA FUEL CELLS	CESSNA FUEL CELLS